



DATA SHEET

Data Sheet number
18.23

Revision number
v.3

Revision date
15.12.2025

Product code

04.11.00.02

LANCES SET NO 2



MATERIAL

Stainless Steel, Polypropylene, homopolymer and elastomer nozzle cover, Antimicrobial and detectable additives in nozzle cover,

NOZZLE COVER COLOURS

Blue **B** Green **G**
White **W** Detectable (dark blue) **DET**

RECOMMENDED WORKING PRESSURE

3 — 30 bar

WEIGHT OF SET

402 g (78 g — weight of hanger)

LENGTH 70 mm

WEIGHT

88 g

FLOW ANGLE

25°/30 l/m

LENGTH 70 mm

WEIGHT

88 g

FLOW ANGLE

00°/20 l/m

FOAMING LENGTH 70 mm

WEIGHT

148 g

FLOW ANGLE

50°/200 l/m



ULTRAHYGENIC®
+ Safety FIRST






- Depending on the type of nozzle (angle/flow), lances can be used to foaming or rinsing.
- Hexagonal Nozzle Protection shape prevents rolling of the lance.
- The nozzles protection are available in some colours (and for stainless steel) allow colour coding.
- Detectable nozzle cover protection is detectable by a metal detector and X-Ray.
- All colours of nozzles made by materials with antimicrobial additive.
- Antimicrobial additive reduces the possibility of growth bacteria of E. Coli and Staphylococcus aureus about 92,1%.
- In a Set available stainless steel hanger.
- The set is also available in the SAVE WATER version: 04.11.00.02.SW.



Hexagonal Nozzle Protection shape prevents rolling of the lance. It eliminates the risk of falling from slopping surface.

ASSEMBLY INSTRUCTION FOR CONNECTING THE LANCE TO THE QUICK COUPLING

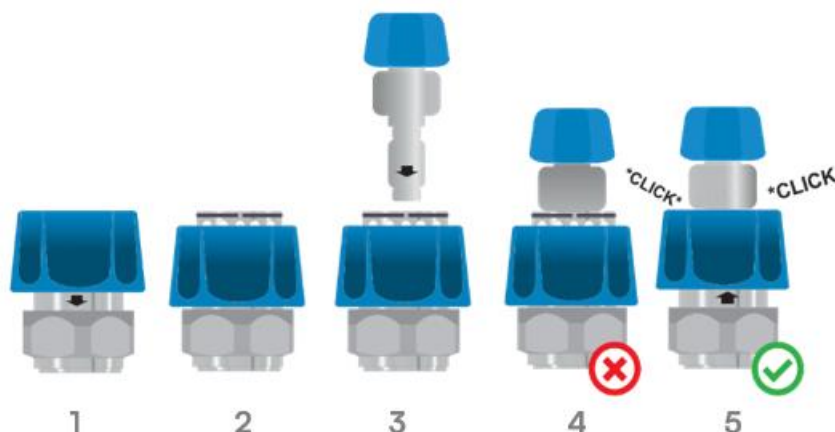

To assemble the lance to the quick coupling, follows this steps:

STEP 1 — pull the cover of the quick coupling down (Picture 1&2);

STEP 2 — insert the lance into the quick coupling and push it until you feel resistance (Picture 3);

STEP 3 — push the quick coupling cover back, then release it so it returns to its original position (Picture 5).



5).

ATTENTION! When the bearing balls are visible, **the quick coupling is not secured correctly** (Picture 4). Incorrect installation of this component may cause it to be ejected by water pressure. In case the lance has not fully been pushed in, move the quick coupling cover back to its original position until you hear a “click” (Picture

Do not replace the lance while the water flow is open!