



DATA SHEET

Data Sheet number
25.25

Revision number
v.2

Revision date
16.07.2025

Product code

20.10.04.03

SATELLITE Clean FOAM CENTRAL 2 PLUS



| | |
|---|---|
| MATERIAL | Stainless Steel housing and connections |
| WEIGHT | 13 kg |
| MAX. DIMENSIONS (WxHxD) | 617 x 280 x 143 mm |
| MOUNTING HOLES DIAMETER AND SPACING (WxH) | ø7 mm; (2 x 285) x 190 mm |
| DOSING RANGE (local injector) | 0,3-8% |
| MIN. WATER FLOW FEED INLET (local injector) | 30 l/min |
| MIN. DILUTED CHEMICAL FLOW | 10 l/min |
| DILUTED CHEMICAL PRESSURE | 8-12 Bar |
| WATER INLET | EXT 1/2" |
| DILUTED CHEMICAL INLET | EXT 1/2" |
| OUTLETS | Female quick coupling 1/2" |
| WATER PRESSURE | 18-40 bar |
| AIR OUTLET | ø6 mm |
| MIN. AIR FLOW (FEED) | 150 l/min |
| AIR PRESSURE (FEED) | 5 - 8 bar |
| NUMBER OF PIECES IN THE PACKAGE | 1 |




CLEAN **FOAM** CENTRAL2-PLUS

- Can be installed in narrow spaces as no need to leave any space for service on the sides of the device.
- Satellite for 2 chemical central agent (foaming or disinfecting) and local injector for local chemical agent.
- There are 4 holes for hanging lances in the lower part of the housing.
- Laser marking available on request.
- It has an 2 air reducers equipped (central and local) with a pressure gauge and liquid separator.
- Easy to use with a reliable manual control mechanism (functions: chemical agent / rinse).
- Easy access to the injector.
- Protection of service elements against unauthorized access.
- Durable, safe and hygienic stainless steel housing.
- The sloping roof and the bottom of the satellite (15°) prevents accumulation of sediments.
- The back satellite wall has 6 mounting holes.
- Equipped with ULTRA HYGIENIC® stainless steel ball valve with female quick coupling.
- Chemical agent, diluted chemical, water and air suction inlets are secured with stainless steel check valves.
- 2 dryers and 2 pressure gauges protected by a stainless steel housing.





DIMENSIONS

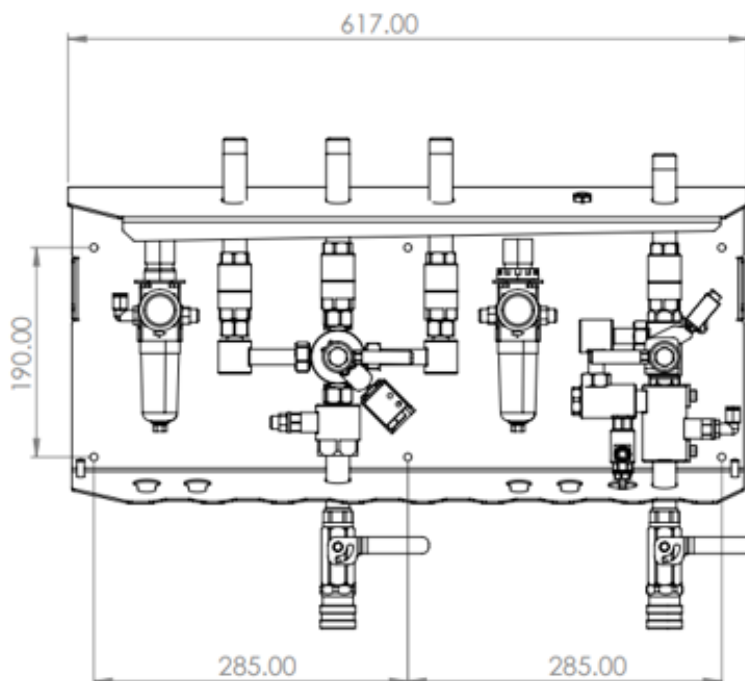

MAINTENANCE

The housing is made of stainless steel. Its anti-corrosion properties depend on the conditions in which the steel is used and its maintenance. Stainless steel products should be cleaned, dried and maintained with products intended for this purpose. Particular attention should be paid to the regime of cleaning for products used in an environment of high salinity or humidity to prevent sediments accumulation.

REMEMBER! RINSE THE DEVICE WITH CLEAN WATER AFTER USE

The suction tube, which is used to transfer the chemical agent from the canister should be immersed in clean water and the device should be run in the FOAM position until clean water is obtained at the exit of the lance.